



 
Trusted Choice

TECSONIC

Gas Cooker

INSTRUCTION SHEET

■ PARTS NAME


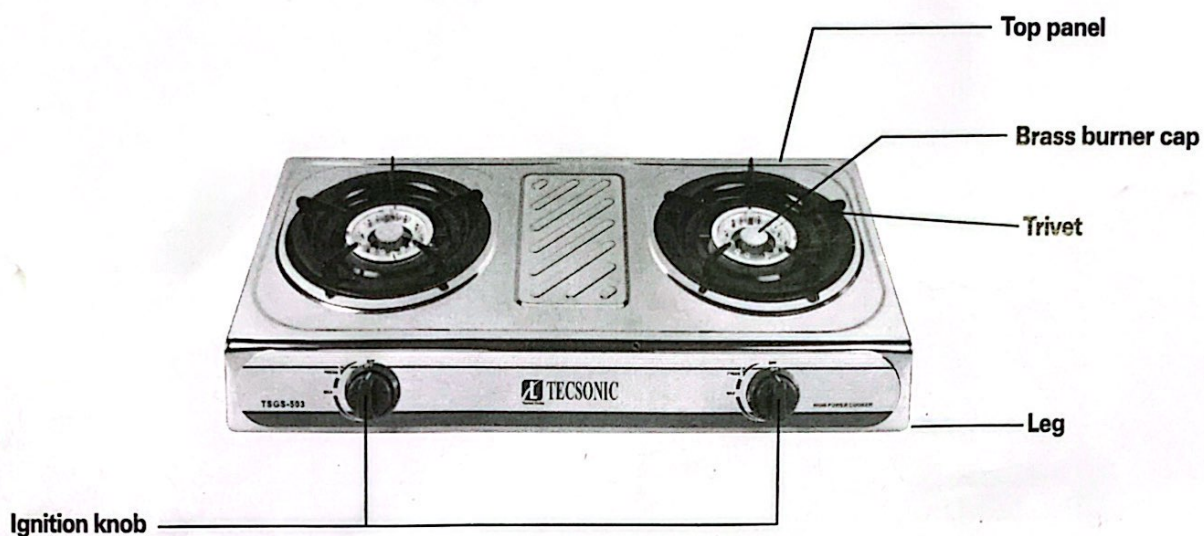


■ CAUTIONS

- Do not use a gas other than that which is specified on the label attached.
- Use for cooking only. Do not dry towels, clothes, etc., over it.
- To avoid damage, do not place charcoal on the burner.
- Avoid covering the flame with a big plate which covers the gas table.
- Do not use the gas table where the flame may be blown off by the wind.
- Make sure that there are no inflammables near the gas table.
- Make sure the room is well-ventilated. Never use the gas table for long periods of time in a small room or in a closed-off space.
- Use only a rubber hose. Do not use a vinyl plastic hose, as this can be dangerous.
- While it is in use, see, from time to time, whether it burns normally.
- After use, turn the ignition knob back to 'OFF' position and make sure the burner is put out.
- When going to bed or leaving the house, be sure to turn off not only the ignition knob but the main gas valve as well.
- The main gas valve not in use should be closed and covered by the cap.
- Be careful to avoid getting burned by touching the top panel of the gas table, as it gets very hot near the burners when in use.
- Never use the gas table for long periods of time (over 10 minutes) in a small room or in a closed-off space without the ventilation, by the ventilation fan or opening the window.
- If a gas leak is found, close the main gas valve, open up all windows, and call your dealer. Do refrain from turning an electric switch on or off, lighting a match, or using a lighter.

■ WHERE TO BE PLACED

  Place the unit away from the wall, and the ceiling, at distances as shown in the figures below.

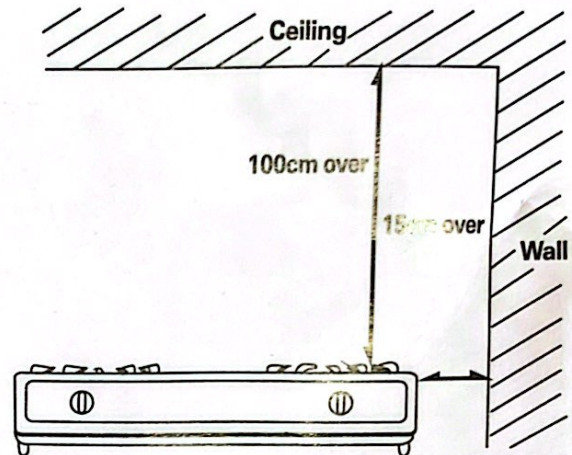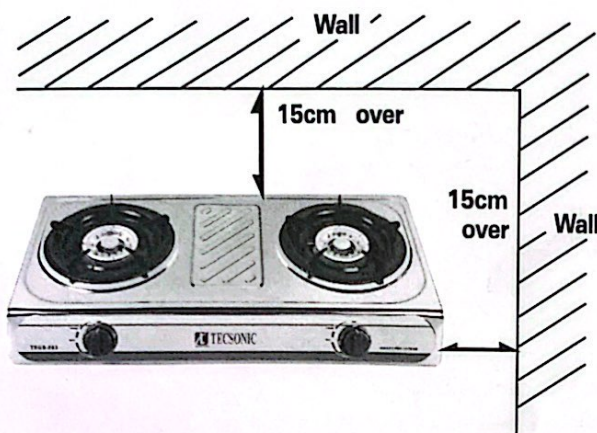

■ HOW TO USE

1. To light the burners:

- Open the main gas valve. Push the gas control knob in and turn it towards the ON position (counter-clockwise) until you hear the ignition click. Make sure that the burner has been lit. In this position, double burner will light up both the small and large burners. To use only the small burner, release the gas control knob and turn it further to the left (● position).
- To adjust the flame size, set the gas control knob to a suitable position between ON (full flame size) and "●" position (small flame size).

2. Air flow adjustment:

The burners usually need no air flow adjustment.

If they should ever burn improperly, the air flow can be controlled by adjusting the air damper inside the gas table (under the control knob). After the gas has been ignited, adjust the air damper until slightly rounded, vigorous blue flames appear.



3. If the burners do not ignite at the first time:

This may be the result of air in the gas hose. Turn the gas control knob back to OFF and try again until the burners ignite.

4. To turn the burners off:

Turn the gas control knobs back to OFF position until you hear a click. Make sure the burner is put out and turn off the main gas valve as well.



