 




# **Gas Cooker**

## **INSTRUCTION SHEET**

## ■ PARTS NAME

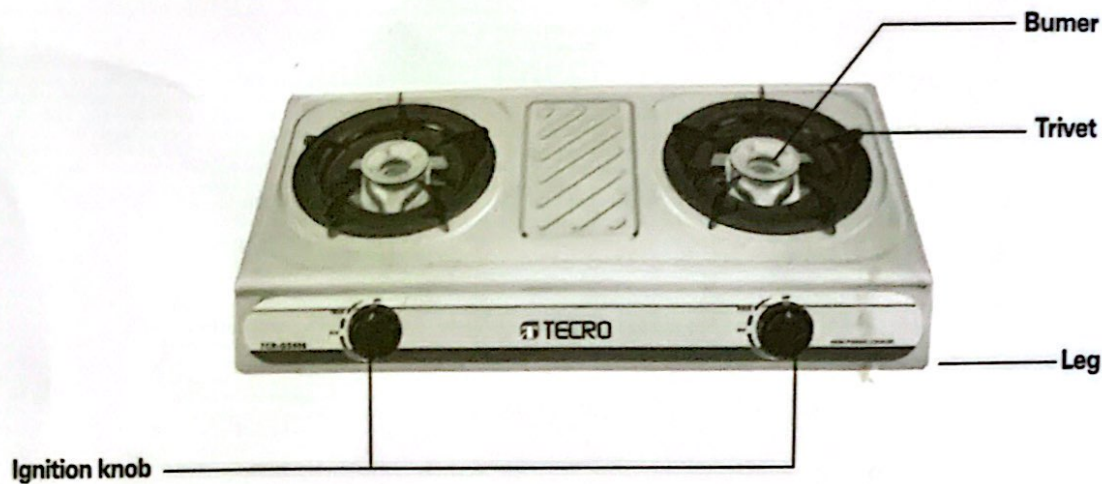

 
 
## ■ CAUTIONS

- When install the stove, please put four rubber legs into the corresponding supra of the stove.
- Do not use a gas other than which is specified on the label attached.
- The unit is to be used for cooking only. Do not dry towels, clothes, etc, over it. If this is done, there is the danger of a fire.
- Avoid covering the flame with a plate.
- Use it in a well-ventilated room.
- Do not use a vinyl hose. It is liable to be softened by heat. Use only a rubber hose.
- Be sure to close the ignition knob of the cylinder after use. When going to bed or going out, be doubly sure that they are closed.
- Avoid touching the burner, trivet, tray, etc, immediately after use. Otherwise, you will get a burn.
- If a gas leak is found close the stopcock, open up all windows, and call your dealer. Do refrain from turning an electric switch on or off, lighting a match, or using a lighter.
- The connection hose should be rubber hose with a length of 1-1.5m, and the rubber hose should not be in contact with the stove itself and should not cross through under the stove.
- Thrust the rubber hose on the gas inlet up to the red line marked on it and fastened it with a hose clamp.



## ■ WHERE TO BE PLACED

Place the unit away from the wall, and the ceiling, at distances as shown in the figures below.

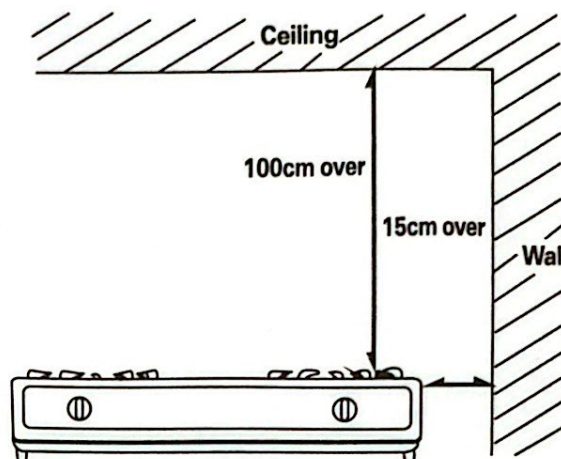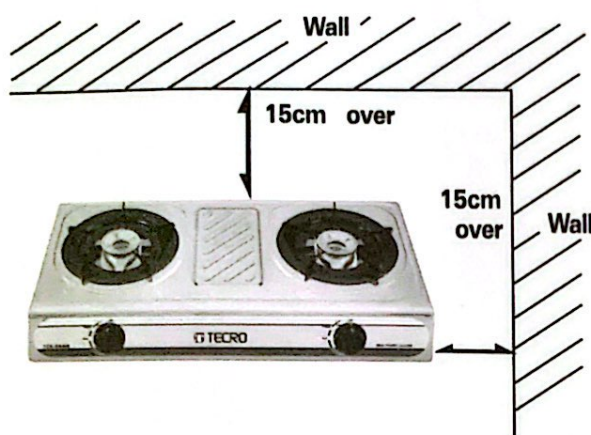

## ■ HOW TO USE

### 1. To light the burners:

- Open the main gas valve. Push the gas control knob in and turn it towards the ON position (counter-clockwise) until you hear the ignition click. Make sure that the burner has been lit. In this position, double burner will light up both the small and large burners. To use only the small burner, release the gas control knob and turn it further to the left (● position).



- To adjust the flame size, set the gas control knob to a suitable position between ON (full flame size) and "●" position (small flame size).



### 2. Air flow adjustment:

The burners usually need no air flow adjustment.

If they should ever burn improperly, the air flow can be controlled by adjusting the air damper inside the gas table (under the control knob). After the gas has been ignited, adjust the air damper until slightly rounded, vigorous blue flames appear.



### 3. If the burners do not ignite at the first time:

This may be the result of air in the gas hose. Turn the gas control knob back to OFF and try again until the burners ignite.

### 4. To turn the burners off:

Turn the gas control knobs back to OFF position until you hear a click. Make sure the burner is put out and turn off the main gas valve as well.

