



POP UP TOASTER MODEL:TSST-906

Instruction Manual



IMPORTANT INSTRUCTIONS


1. Please read these instructions before operating and retain for future reference.
2. To protect against electrical hazard do not immerse any part of the appliance or cord in water or any other liquid.
3. Close supervision is necessary when the appliance is used near children.
4. Do not leave the appliance unattended when in use.
5. Always use the appliance on a dry, level surface.
6. Do not use this appliance outdoors.
7. Always unplug from the plug socket when not in use and before cleaning.
8. Do not operate the appliance if damaged, after an appliance malfunctions or it has been damaged in any manner, return to an authorized service engineer for repair, because special purpose tools are required.
9. In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to an authorized service engineer.
10. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
11. Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
12. Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
13. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
14. Caution-bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
15. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN INTENDED USE.
16. Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
17. Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.
18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. The temperature of accessible surfaces may be high when the appliance is operating.
22. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

WARNING!

Never attempt to extract Jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to cool down, unplug and carefully remove the bread.

Main components

- 1 2 slice toasting slots
- 2 Start control/high lift bread release
- 3 Stop and automatic eject button
- 4 Electronic variable browning control

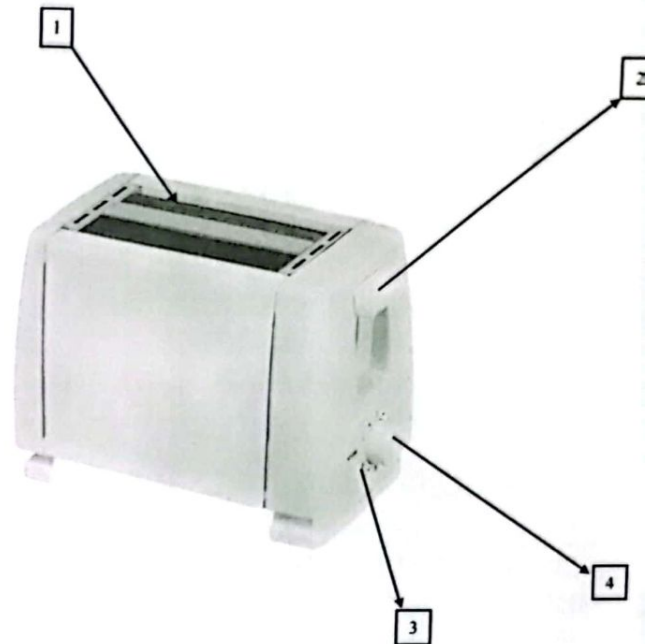

Operation

- plug the toaster in and adjust it to the type of toasting you require, with the browning control(4)
- Select the desired browning setting, from No.1-lightest, No.7-darkest. When using the toaster for the first time we suggest you toast on No.3. Different types of bread and personal preference may require a different browning setting.
- put the bread into the open toasting slot (1) and press the start control(2) down. It remains down until the bread is toasted
- once toasted, the slices appear in the openings(1) and the start control(2) returns to its original position. The toaster switches "off" automatically.
- Press the 'stop' and automatic eject button(3) if you wish to stop the toaster
- If the bread sticks in the toaster, unplug it, wait for it to cool, and remove the bread

Care and cleaning instruction

- ensure the toaster is unplugged before cleaning it.
- Never place it in water or any other liquid
- To clean the toaster, unplug it and allow to cool
- Do not put anything bread in the toaster during cleaning.

HOW TO REMOVE BREADCRUMB

Your toaster comes with a removable, swing out crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.

CLEANING AND MAINTENANCE

1. Always unplug the toaster from electrical outlet and allow to cool before cleaning.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to cloth, not directly onto the toaster.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and shake gently. Never inset any hard or sharp instrument into the slots as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outsides of the toaster, use the cord storage cleats on the underside of the toaster.

CAUTION

To prevent electric shock , disconnect from the mains before removing cover .

No user serviceable parts inside.

Refer servicing to qualified service personnel.

Warranty Information


The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with 1 year , starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Power supply : 220-240V~ 50/60Hz 750W