



 
Trusted Choice

TECSONIC

OPERATING INSTRUCTIONS

COMMERCIAL BLENDER

MODEL NO.: TSBL-CB1000

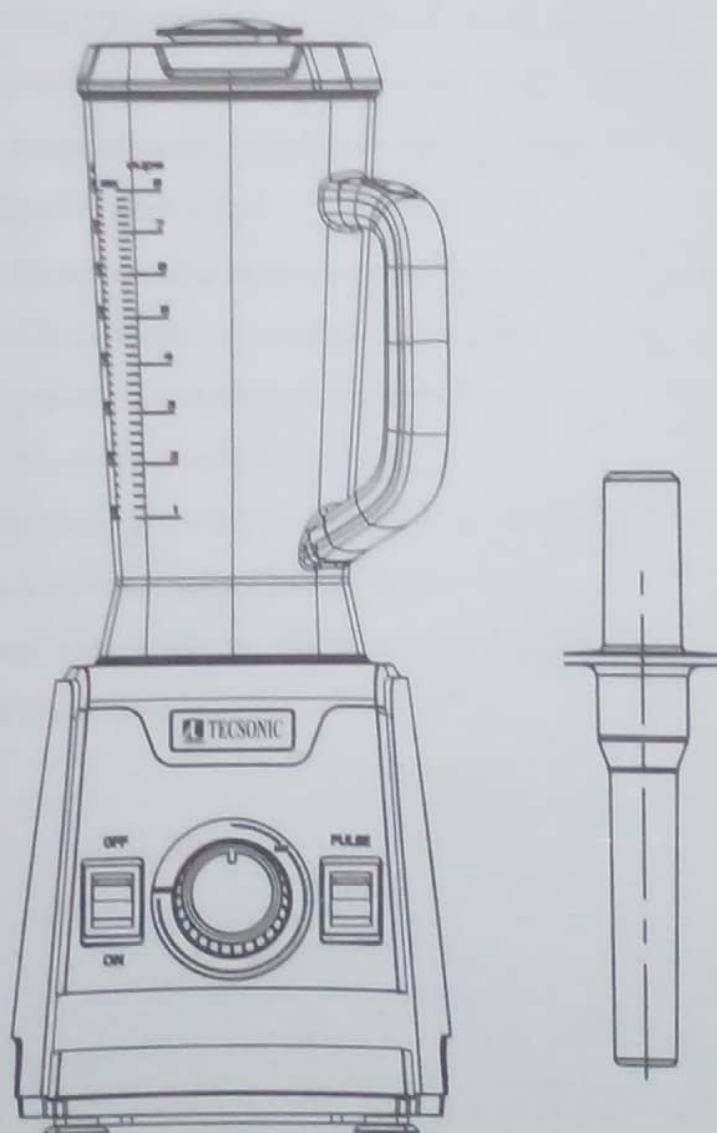

220V-240V 50/60Hz 1100W

Please read the instructions carefully to ensure proper and safety use of this product.

1. Product Introduction
2. Using Method
3. Safety Regulations and Product Structure
4. Cleaning And Keeping
5. Safety Using Note

Product introduction

Pro- Blender

It is a high power multifunctional household blender which can blending, mixing and grinding different foods. It can make fruit juice, soy milk, salad dressing, fruit paste, soup ,grain power and different cuisine. One machine can be used for multiple machines.


Basic Parameter

Rated Voltage : AC220V-240V


Rated Frequency : 50Hz/60Hz

Rated Power: 1100W


Circuit diagram

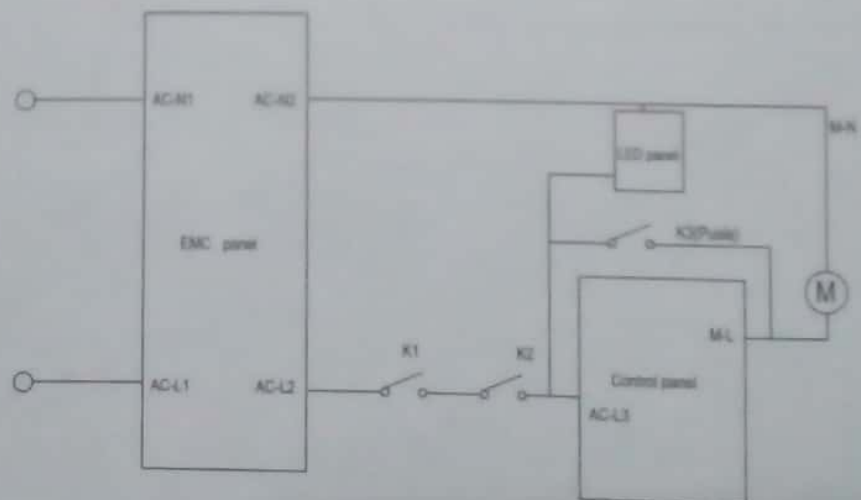

Product and Spare Parts

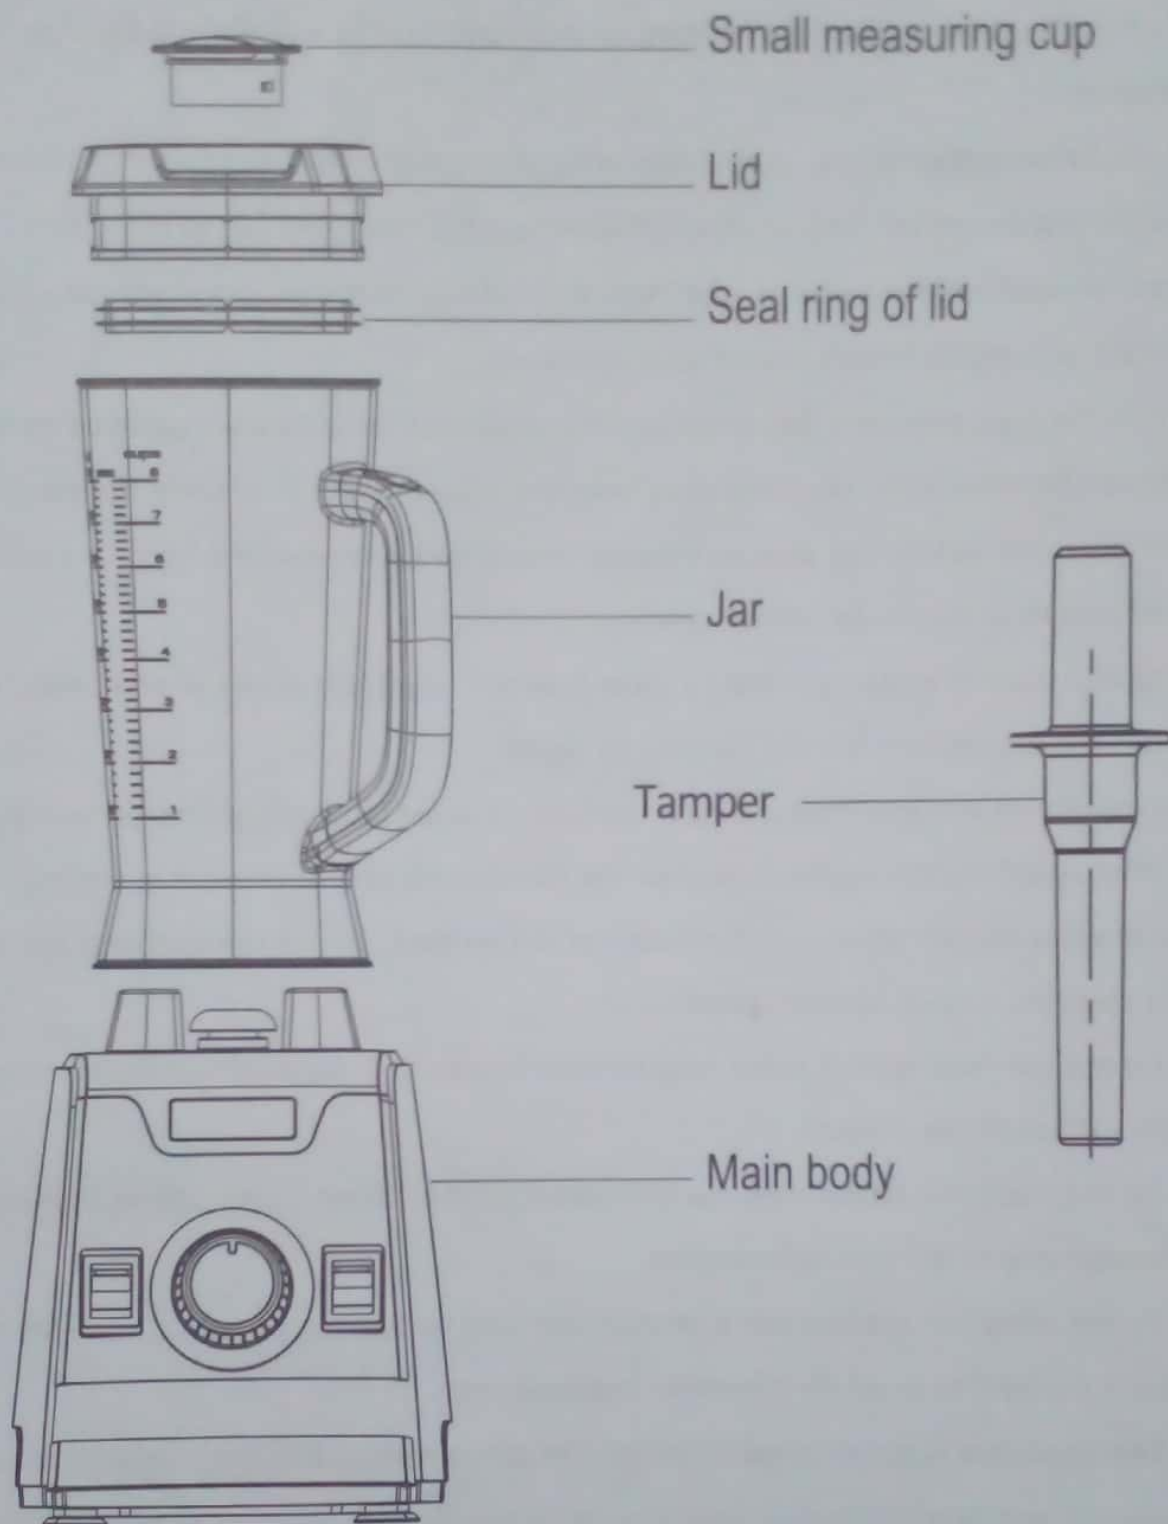

Maximum water level diagram on the jar

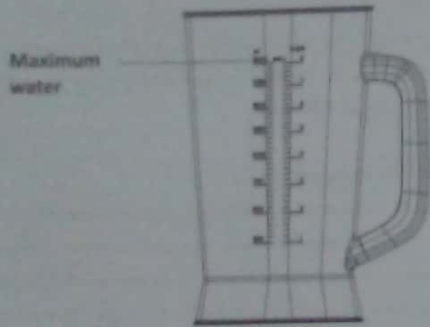

Attention: when using the blender, the maximum capacity is 2L/8

cup(s). Please do not exceed the maximum scale of the mark, avoid food overflow

Measuring cup: avoid water overflow and measure the ingredients.

Seal rings of lid: avoid water overflow

Knob: for selection functions

Lid: Cover the cup body to prevent liquid overflow when the product works

Jar base: Holding cup


Main body: The main components of the product are electrical appliances, microcomputer control panel power source to provide power

Usage

- Before using the product for the first time, please clean up the parts that contact with food (please refer to clean& maintenance)
- Before using the product for the first time, please put 1000ml clean water into the jar, choose "Pulse" button to work 4-6 times. After that, pour out the water.

3

Switch board

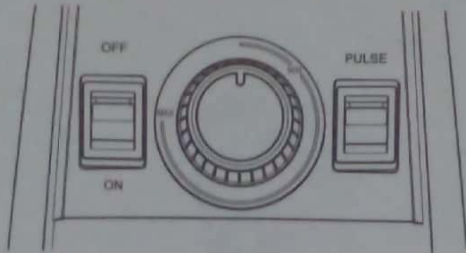

- There are two switch, including 'Pulse' ; 'Power' switch.
- Stepless control switch: 'MIN' to 'MAX'


Operation instruction:

1. Connect the machine with suitable voltage and frequency (AC220V-240V 50/60Hz 1100W). Connect with power: when the machine connects with the power.

Notice: if the blender lid is not fixed suitably on the jar, the machine could not work.


Usage instruction

1. Put the food into the jar: cut the food as the size of 2CM*2CM*2CM cube, clean the food and put into the jar. Please refer to the receipt (pic 1) for the ratio of food and liquid.

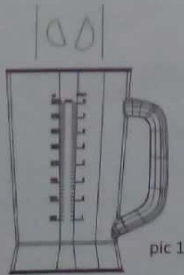


4

2. Put the water into the jar: Please refer to the receipt (pic 2) for the ratio of food and liquid.

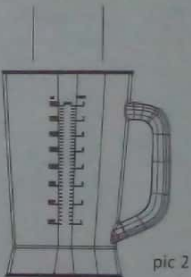


pic 2

3. Install measuring cup: Put the measuring cup on the lid and fix it clockwise on the lid. Please refer to pic 3 as followed.

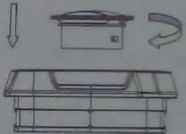

pic 3

4. Install the jar: Put the lid with measuring cup on the jar, fix it clockwise till the arrow marks on measuring cup match arrow marks on lid. (Refer to pic 4).

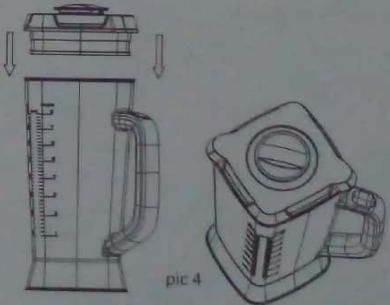

pic 4

5

5. Working procedure: Fix the jar right on the base, connect the machine with power. (pic 5)



pic 5

SAFETY STANDARD AND PRODUCT STRUCTURE


STANDARD

IEC60335-1: household and similar electrical appliances- safety- part 1: general requirements.

IEC60335-2-14: Household and similar electrical appliances - Safety - Part 2-14: Particular requirements for kitchen machines

PRODUCT STRUCTURE

 PRODUCT SIZE: 217*193*496mm
PRODUCT NET WEIGHT: 2.93 kg

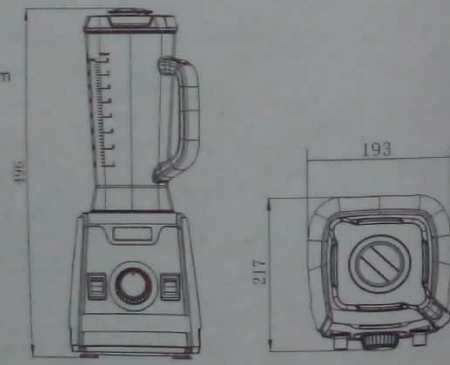


6

The motor is of stable good quality and long life-time. Meanwhile, the motor is with high-quality ball-bearing.



 With 8 premium three-dimensional Japanese stainless steel blades (SUS301), this professional blender can easily pulverize the food in a short time with good performance ,like fruits, vegetables ,meat, fish and so on. The nutrition of food can be more easily absorb.

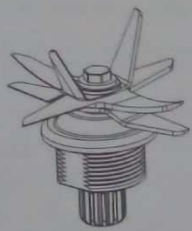

CLEANNING AND MAINTENANCE

Cleaning the motor housing Before you clean the product, please make sure that the power is off and the plug is out of the power outlet. Wipe the motor housing with a damp cloth. Never immerse the motor housing into water or any other liquid.

7

Cleaning the jar,cover and measuring cup.

Clean all parts in lukewarm cleaning liquid with a soft cloth.You can also use the kitchen brush to clean the parts.Rinse the parts under the running water and dry them .

WARM TIPS : The cover, measuring cup and the sealing ring on cover are suitable in upper dish rack of dishwasher with the standard cleaning mode.The big jar is only suitable at the bottom rack when in dishwasher.

Removing the food residue and smell

Some kinds of food, like garlic, fish and carrot, they're of intense odor and will leave strong smell or residue on the jar or cover. To remove such odor or residue, you can immerse the jar and cover into lukewarm water which is mixed with the cleaning fluid for 5 minutes. After it, you can wash them with soft detergent in warm water and then rinse them under running water.Finally dry them before you store it.

MAINTENANCE

This product should be stored in dry place and avoid direct ultraviolet radiation. Before storing the product, please make sure that it is clean and dry.

Be extremely careful when handling the blades. Never use your hand or fingers to touch the blade to avoid any hurt since the blades are very sharp.

IMPORTANT SAFETY ADVICE

Please read through the information and safety advice contained in this operating instruction manual carefully and thoroughly before you use it at the first time.

1. Make sure that the voltage shown on the rating plate corresponds with that of the mains supply. The rating plate can be found at the bottom of the motor housing.The blender is only to be connected to the AC supply. The voltage of this product is AC 220V-240V,50/60 Hz.

8

Cleaning the jar, cover and measuring cup.

Clean all parts in lukewarm cleaning liquid with a soft cloth. You can also use the kitchen brush to clean the parts. Rinse the parts under the running water and dry them.

WARM TIPS: The cover, measuring cup and the sealing ring on cover are suitable in upper dish rack of dishwasher with the standard cleaning mode. The big jar is only suitable at the bottom rack when in dishwasher.

Removing the food residue and smell

Some kinds of food, like garlic, fish and carrot, they're of intense odor and will leave strong smell or residue on the jar or cover. To remove such odor or residue, you can immerse the jar and cover into lukewarm water which is mixed with the cleaning fluid for 5 minutes. After it, you can wash them with soft detergent in warm water and then rinse them under running water. Finally dry them before you store it.

MAINTENANCE

This product should be stored in dry place and avoid direct ultraviolet radiation. Before storing the product, please make sure that it is clean and dry.

Be extremely careful when handling the blades. Never use your hand or fingers to touch the blade to avoid any hurt since the blades are very sharp.

IMPORTANT SAFETY ADVICE

Please read through the information and safety advice contained in this operating instruction manual carefully and thoroughly before you use it at the first time.

1. Make sure that the voltage shown on the rating plate corresponds with that of the mains supply. The rating plate can be found at the bottom of the motor housing. The Blender is only to be connected to the AC supply. The voltage of this product is AC 220V 240V 50/60 Hz.

2. Do not disassemble the product when it is plugged to the power outlet.
3. This product is of Y connection. The product is complied with the relevant safety regulations. Repairs are only to be carried out by an appointed professional person.
4. Do not lift up the jar during operating, to avoid getting injury or making damage to the product.
5. If appliance suddenly stop during operating, it may due to the automatic thermostat protecting the motor from overheat. Please turn the rotary button to the "OFF" position and remove some of your ingredients, disconnect the power and cool down for 20-30 minutes before restart your appliance.
6. Place the appliance on a flat, clean and dry surface. Do not use the appliance on the carpets/towels/cloths etc. Keep away from the edge of table to prevent drop down.
7. For your own safety, use only accessories and spare parts designed for your appliance and sold in an approved service centre.
8. The cup cover may be coloured by some fruit and vegetable drinks after a period of time. It is normal and it is not harmful to health.
9. Do not move the appliance during it working, to avoid food spillage resulting in burns.
10. When washing the appliance, handle the blades with care to prevent injury. In order to prevent discoloration or deformation of the product, do not use chemical agents for cleaning, such as alcohol, gasoline, etc.
11. Do not use steel wire or other hard objects for cleaning. Otherwise it may scratch the surface of the product.
12. Do not place the accessories in a microwave oven or disinfection cabinet, to avoid damage due to thermal deformation.
13. Do not store the appliance in a location exposed to high temperature/humidity or direct sunlight to avoid discoloration in appearance.
14. This appliance is not deigned to be used by persons (including children) with reduces physical, sensorial or mental capacities, or by people with no prior knowledge or experience, except where they have benefited from supervision or precious instructions relating to the use of the appliance, from a person responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

15. This appliance is intended only for domestic culinary use, in an indoor setting and under supervision.
16. This appliance cannot be used for dough kneading. Do not use metal rod for blending to prevent damage to the blade and the jar; Do not pour any hot mixture into the blender, cool it down before stirring. For sticky food, such as Mayonnaise, Sauce, etc., do not keep blending for more than 2 minutes once. Please stop the appliance and turn over the mixing ingredients with a plastic spatula, then continue.

Caution:

- 1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2) Children should be supervised to ensure that they do not play with the appliance.
- 3) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 4) The product is with motor overheat protector. When the motor reaches to around 105°C, it will stop working until it is cool down. It takes about 10-20 minutes to restart to work. Pls note that the product is not broken.
- 5) Please use the high speed first to smash the food and then to use the low speed to mix it to protect the motor.