



Trusted Choice

TECSONIC

INSTRUCTION MANUAL

JUG KETTLE



TSEK-677

2.5L 220-240V 50Hz 1500W

Please read all the instructions before using the machine
Keep this manual for future reference

Thank you for choosing our products. It is just one of a complete range of cleverly designed, safe and practical products which will help to make your life easier. Please read these instructions carefully to get the best results from this product.

SAFETY INSTRUCTIONS

1. No responsibility is accepted for damage resulting from improper use or non-compliance with the instructions.
2. The kettle is designed for heating water only. Never put any other liquid into the kettle.
3. Before inserting the main plug into the socket check whether the supply line voltage and current rating are in compliance with the rated electric parameter shown on the kettle label.
4. Do not operate the kettle with wet hands.
5. Keep children away from the kettle which is either in heating or filled with hot water.
6. Prevent from scalding water or steam.
7. Pour away the very first water boiled with this kettle. Then it is ready for use.
8. Do not touch any part of the kettle except the handle when the kettle is fully filled with boiling water.
9. Pour out boiling water as soon as boiling process is to prevent any chance of injury from "HOT" kettle.
10. Remove the plug from the wall socket in following case:
 - a) after use
 - b) malfunction
 - c) before cleaning
11. When removing the plug from the wall socket never pull on the power cord.
12. Regularly clean and scour out the kettle, don't allow the kettle, especially the heating base, be immersed in water.
13. The appliance must not be immersed in water.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.

OPERATION GUIDELINES

1. Filling water
 - The capacity of kettle is cleanly marked on the kettle body. It should not be higher than the max line, nor lower than the minimum line.
 - On filling water, care should be taken to avoid water column flowing on the kettle's outside surface.
2. Locating
 - Place the kettle on a stable flat surface.
 - Never heat the kettle on any wet surface, do not allow water to penetrate the electrical parts inside the kettle.
 - Do not position the kettle on or near hot surface or near open flames.
3. Switching on
 - Insert the main plug on the power cord into the wall socket.
 - Please take care that the power cord must be well located and not in the path of anyone.
 - push the restoring switch.
 - The red indicator lamp brights, it indicates that the kettle is in heating.
4. Boiling
 - The kettle is automatically switched off several seconds after the water is boiling.
 - The red indicator lamp goes out as switch off.
5. Restoring
 - After the kettle has switch off, it will need sometime to cool down, Almost after 15 seconds, the kettle can be switched on again manually.
 - if the red indicator lamp still goes out after pushing the restoring switch, it may be the case that the temperature sensing controller is still in hot condition and time must be given for it to cool down.

FEATURE

- 1) Concealed heating element with stainless steel kettle bottom.
- 2) Temperature sensing controller-automatic switch-off when water is boiling.
- 3) Dry boiling protector-boil-dry safety cutoff.
- 4) Easy-lift hinged lid.
- 5) Rotary (360) cordless base lead to the convenience for use.
- 6) High shine silver finish

TECHNICAL DATA

MODEL	TSEK-677
POWER	1500 Watts
SUPPLY	220-240V 50Hz
CAPACITY	2.5 Liters