

User Maintenance Instructions

This appliance should be cleaned after every one use.

1. Unplug the Rice Cooker from the outlet when not use or before cleaning.
Never immerse Heating Body in water or Any Other Liquid! Do not Allow the Rice Cooker to cool completely before cleaning.
2. Do not use abrasive cleaners or scouring pads or steel Wool to clean the Rice Cooker.
3. Heating Body: Lightly wipe the exterior with a damp cloth or sponge. DO NOT IMMERSE HEATING BODY INTO SOFT CLOTH.
4. Inner Pot: Fill with hot water and let it fit for a while and then wash in hot soapy water with a soft cloth.
5. Keep the outer lid detachable inner lid dry and clean when not used.
6. Heating Plate, Thermostat: Grains of rice or other foreign matter may stick to the heating plate. These must be removed to prevent inadequate cooking. To remove cooked rice. Smooth sand paper can be used. Smooth out and polish the spot for good contact between the heating plate and the bottom of the Inner Pot.
7. If the power cord is damaged. To avoid risk, it should be replaced by a service center or a professional technician.
8. To protect the performance of electric insulation, the equipment (rice cooker) can not be immersed into water or be rinsed.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY!

Save These Instructions



Model: TRCH-1000 1.0L
TRCH-1800 1.8L
TRCH-2200 2.2L
TRCH-2800 2.8L



RICE COOKER OPERATION

1. Measure and wash the rice. Transfer it to the Inner Pot. Do not use the Inner pot to wash the rice as damage may occur to the non-stick surface.
2. After transferring the rice to the Inner Pot add the water.
For each measure of rice use 1.5 measure of water.
3. Turn the Inner Pot back and forth to make certain it has good contact with the heating element.
4. Put the Lid on the rice cooker.
5. Insert the plug into the rice cooker and then plug it into the deepest part socket.
6. Press the electronic switch to "COOK". The indicator lamp for the function chosen will then illuminate.
7. Once the cooking is completed for either function the "WARM" feature will engage.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against electrical shock, do not immerse cord, plug or base unit in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the Service Center for examination, repair or adjustment.

5. Non-recommended accessory may cause hazard.
6. Do not use outdoors.
7. Do not let cord hang over edge of table or counter. Or touch hot surfaces.
8. Do not put on or near a hot gas or electric burner, or in heated oven.
9. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids.
10. Do not use appliance for other than intended use.
11. Lift and open cover carefully to avoid scalding and allow water to drip into Rice Cooker.
12. To reduce the electrical shock, cook only in removable Inner Pot. Do not pour liquid into outer Pot.
13. CAUTION: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.
14. The cord to this appliance should be plugged into 220V~ electrical outlet only.
15. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
16. Never use the Inner Pot to store leftover cooked rice. Always transfer the leftover rice to a proper storage container and keep it in the refrigerator until ready for use.

**DO NOT IMMERSE THE HEATING BODY OF THE RICE COOKER
IN WATER OR ANY OTHER LIQUID!**