



265mm

无蒸笼

新版

193mm


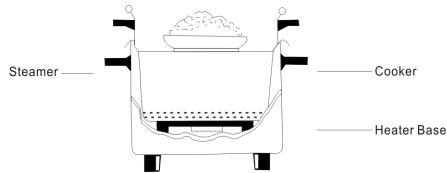


FIG. III
Warning

1. Never immerse the Cooker into the water. Use damp cloth to wipe the Cooker clean.
2. Never use sandy powder or steel wool when washing the Cooker and the Lid to avoid scratches.
3. Never use force in washing the Cooker as this may cause dents on it, resulting to insufficient cooking, and the Heating plate maybe deformed causing damage to the cooker.
4. Never attempt to push the Cook Switch on immediately after it has just shut off.
5. This appliance is not suitable for use by the invalid, persons with disabilities and young children. Close supervision and guidance under a qualified adult is necessary if they are going to use this appliance to avoid electrical hazards and accidents.
6. In case of damaged power cord, it should be replaced by an authorized repair shop. Never use a damaged power cord, it may cause damage to the machine and could result to electrical hazards and fire.

The electric circuit diagram

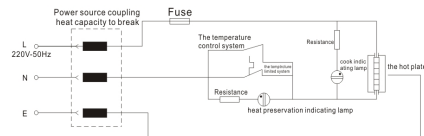

Circuit diagram notice




AUTOMATIC RICE COOKER

INSTRUCTION MANUAL



Model No: TSRC-5600 TSRC-6600 TSRC-8500 TSRC-12000
Made In China

PARTS IDENTIFICATION

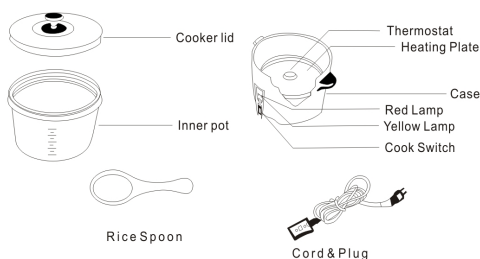

PROCEDURES FOR COOKING RICE

1. Measure the quantity of rice desired with use of Measuring Cup. One cup of uncooked rice yields approximately 3 cups of cooked rice.
2. Wash uncooked rice preferably in another bowl or in Cooker but avoid dents.
3. Put washed rice into the Cooker evenly with the right amount of water (Fig. II). Use the following table of proportion as guide.

Quantity of Rice (Measured by Measuring Cup)	Water in the Kettle (Including Rice)
1 cups	Up to 1nd level line
2 cups	Up to 2th level line
3 cups	Up to 3th level line
4 cups	Up to 4th level line
5 cups	Up to 5th level line

Note: Amount of water may vary according to individual taste or preference.

4. Set the Cooker vertically inside the case, then move the Cooker left and right to make sure that the Cooker fully contacts with the Heating plate.

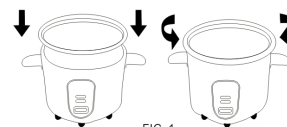


FIG. 1

Keep the bottom of Cooker and surface of Heating plate Clean.

5. Put on the Cooker lid.
6. Insert the plug securely into the socket of the Cooker first then the other end into the wall outlet.
7. Press down the white Cook Switch. When the rice is cooked, the Cook Switch turn off automatically, and the Yellow Lamp lights on.

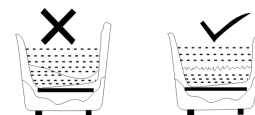


FIG. II

8. Do not remove the Cooker lid for at least 15 minutes more. Residual heat of the Cooker ensures proper cooking of rice, thereby saving on electricity.
9. If power failures occurs temporarily while cooking, do not lift the Cover. Wait until power is restored and the cooking will continue.
10. To heat left-over rice, transfer the left-over rice into a small bowl, then add a little amount of water into the Cooker Place the Steamer into the Cooker. Put the bowl of left-over rice on it (FIG. III). Follow cooking procedures 5 to 8. Like wise, the steamer can be used for steaming SIOPAO, SIOMAI, FISH, CRABS, SHRIMP, etc...
11. Unplug the Cooker after using.